




# How to clean Sony Ericsson QuickShare T630 joystick

This guide will direct you to clean the joystick to improve function.

Written By: Shelby Hartin

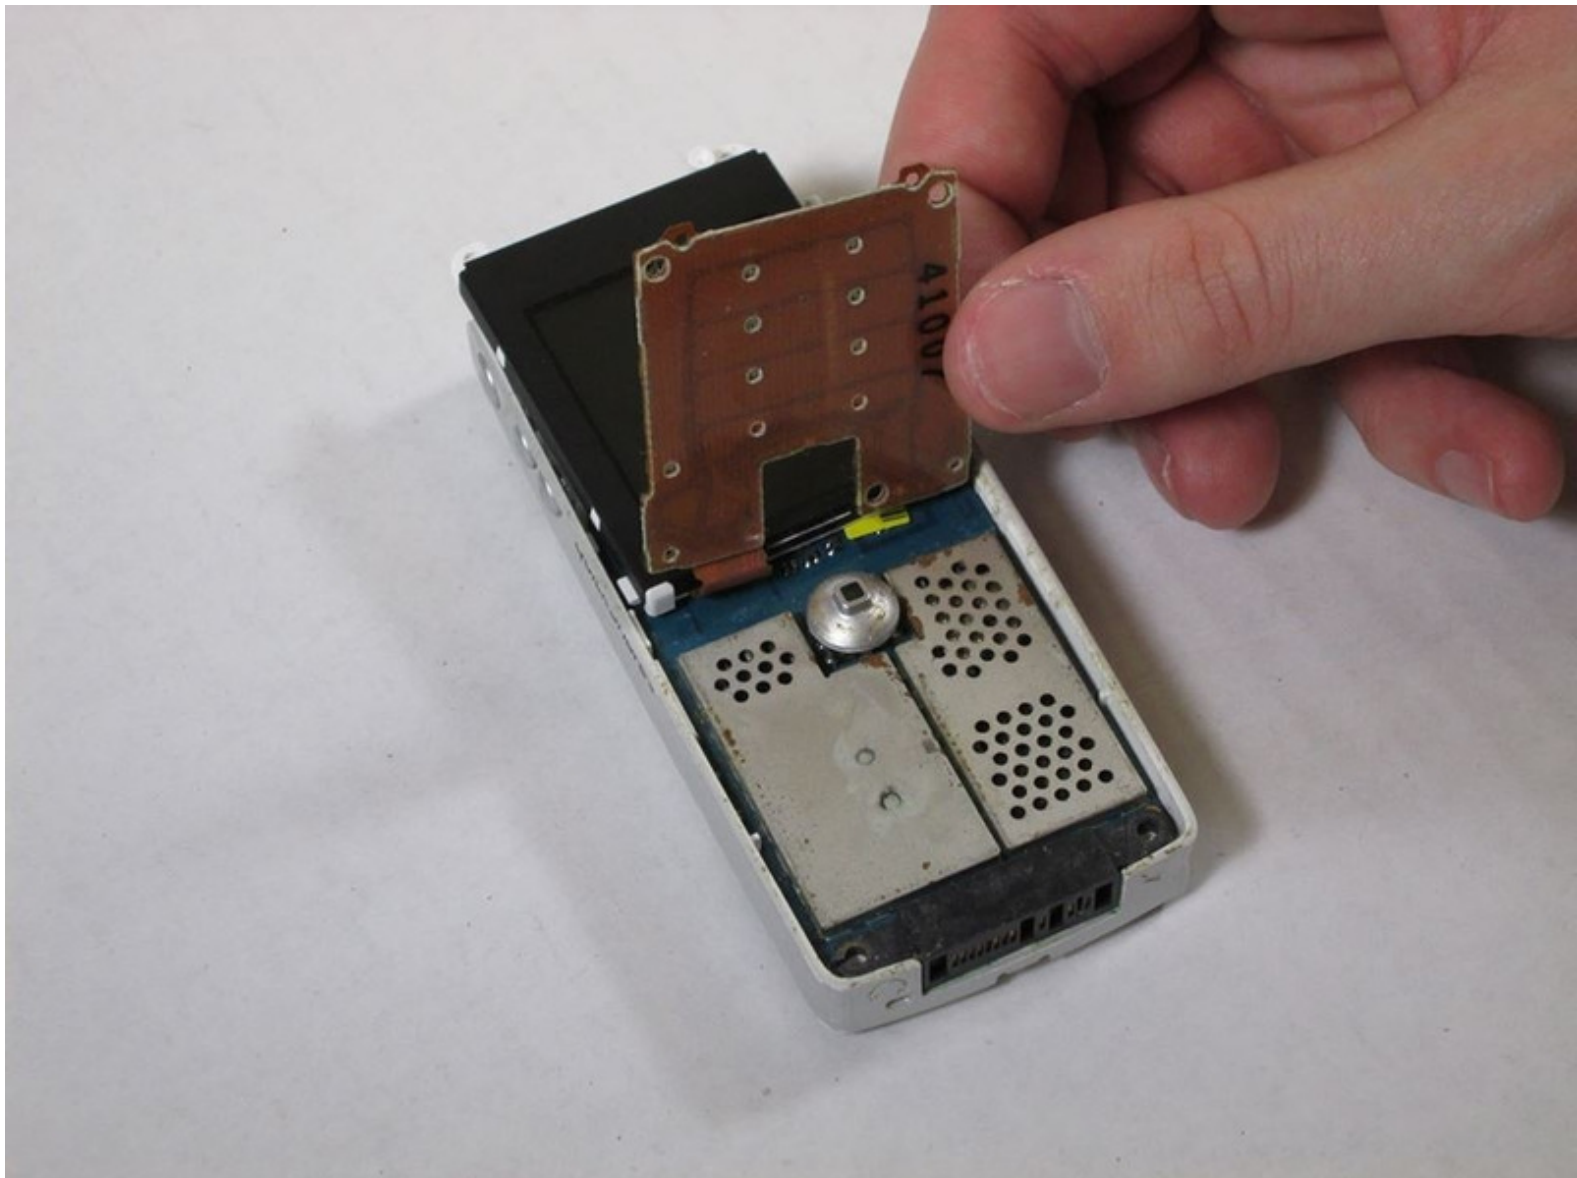

## INTRODUCTION

Before accessing the joystick, several prerequisite steps are required. This guide will show you how to disassemble the device in order to access the joystick for proper maintenance.

---



### TOOLS:

- [Cotton Swab](#) (1)
  - [High Content Rubbing Alcohol](#) (1)
  - [Spudger](#) (1)
  - [T8 Torx Screwdriver](#) (1)
-

## Step 1 — Sony Ericsson QuickShare T630 Phone Enclosure




- Begin the disassembly by placing your Sony Ericsson QuickShare T630 on a flat surface.

## Step 2





- Slide the protective panel on the backside of the phone downward and remove it entirely, revealing the battery underneath.

### Step 3

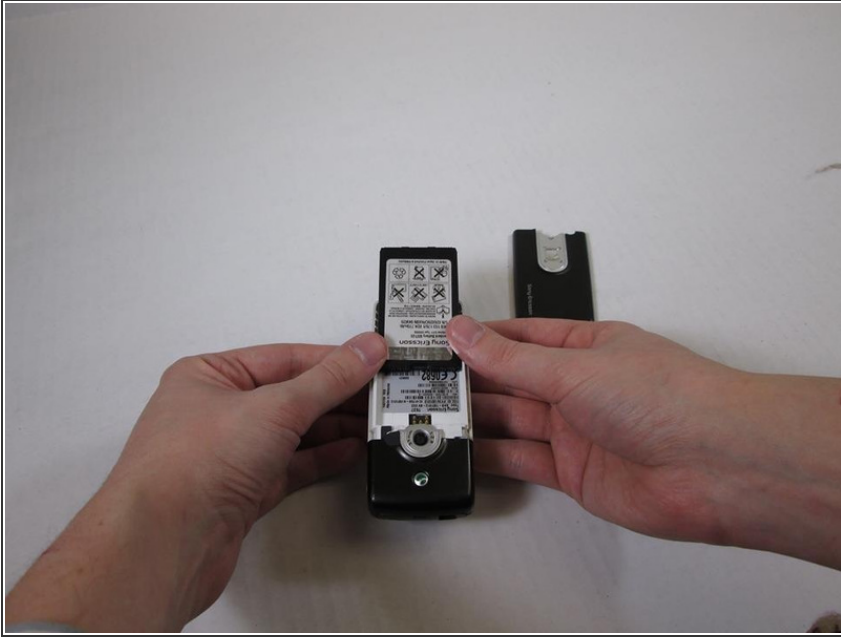

- Slide the battery upward to remove.

### Step 4

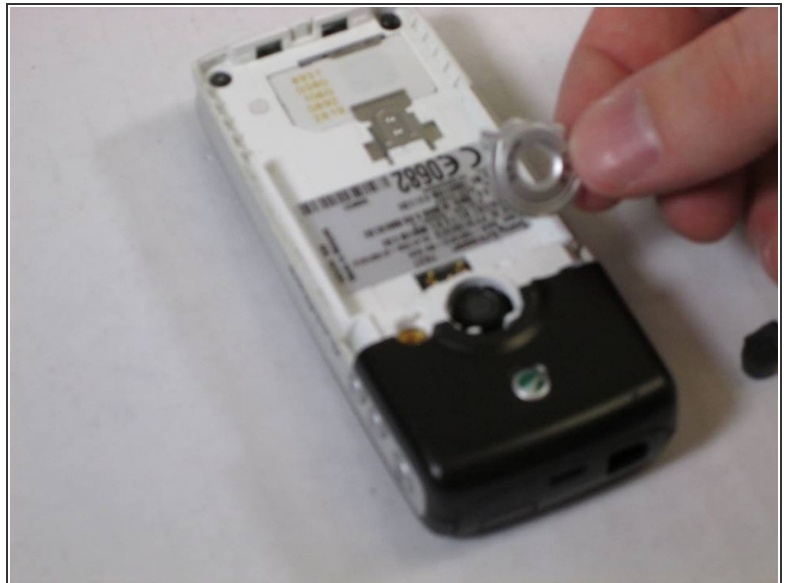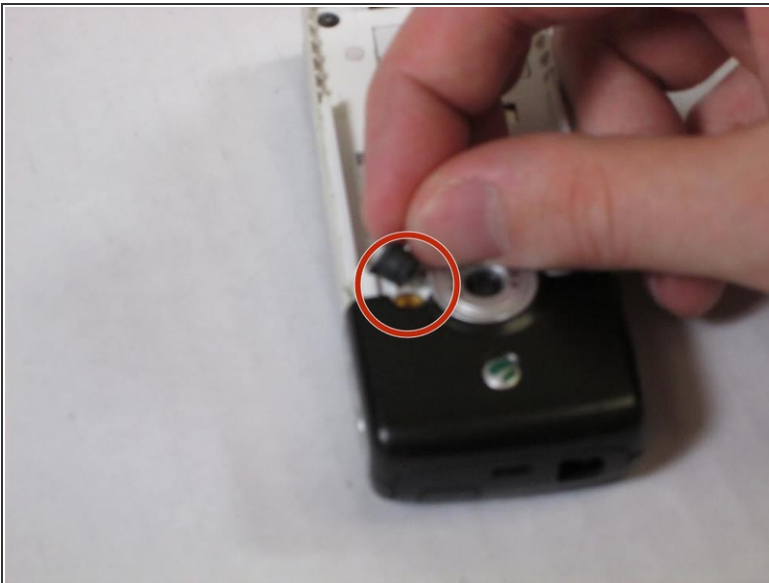

- Remove the rubber plug located near the camera by gently prying upward with your fingers.
- Gently lift the camera shield after removal of the rubber plug.




## Step 5



- Pry the remaining panel to loosen its contact to the phone using a spudger.
- Slide the panel upward to remove it completely.



⚠ These steps will require a slight appliance of force.

## Step 6

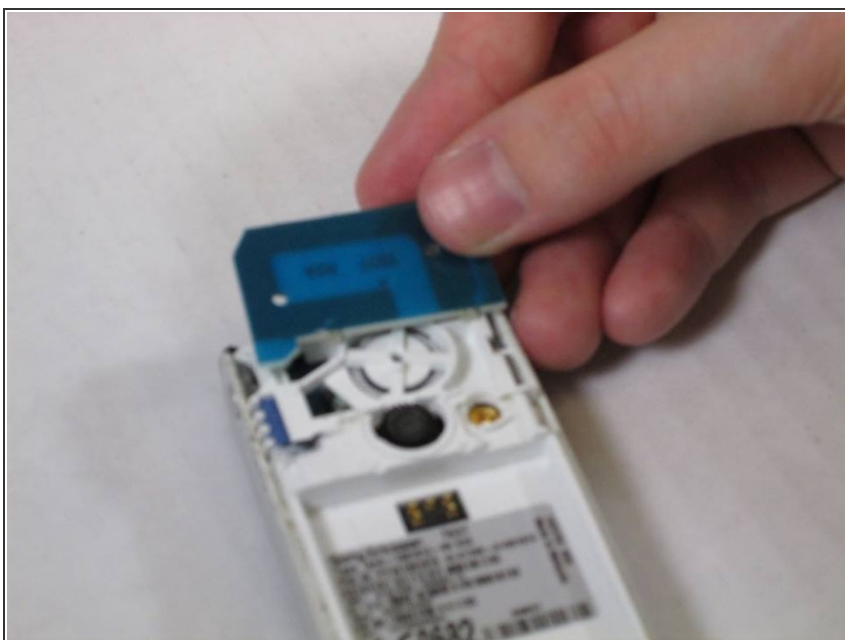

- Slide the aerial upward to remove it.

## Step 7

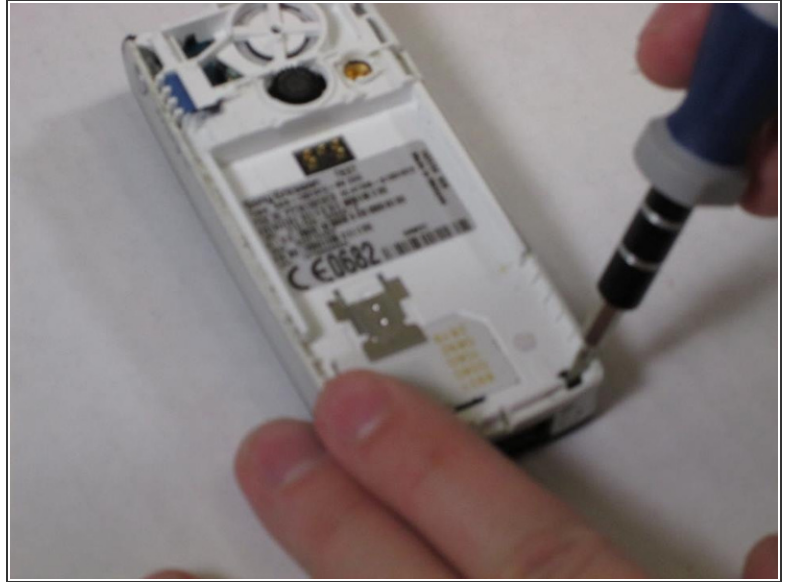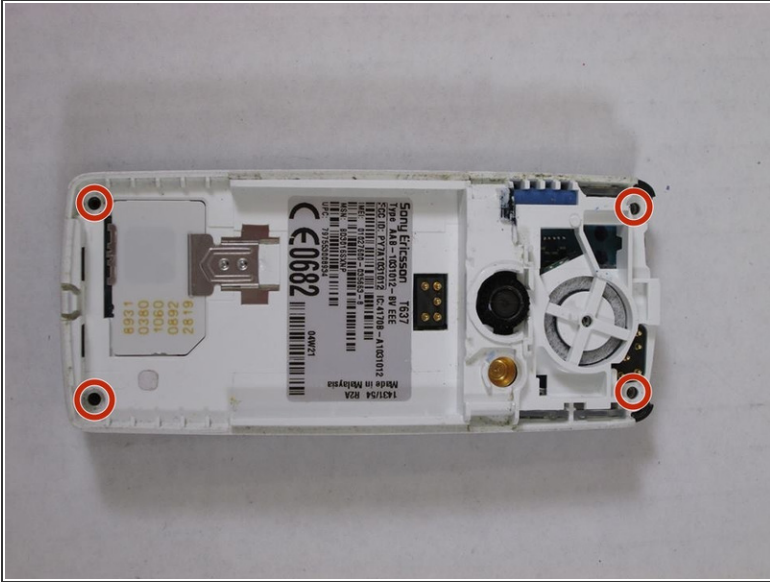


- Locate screws on four corners of device
- Remove the screws

## Step 8



- Gently lift and remove the front panel of the phone after removing the screws.


## Step 9

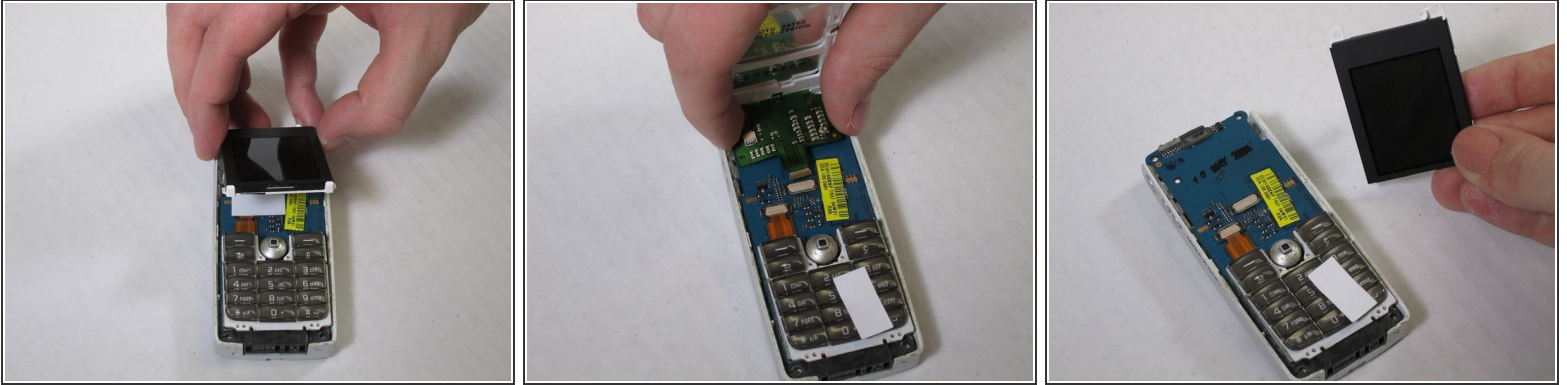

**⚠** This step is NOT required for joystick maintenance or keypad maintenance and replacement! Continue on to step 10 if you are attempting to achieve either of these goals.

- Slowly lift the screen to reveal the green circuit ribbon connecting the screen to the phone.
- Gently pull the ribbon from the circuit/
- Remove the now disconnected screen.


## Step 10

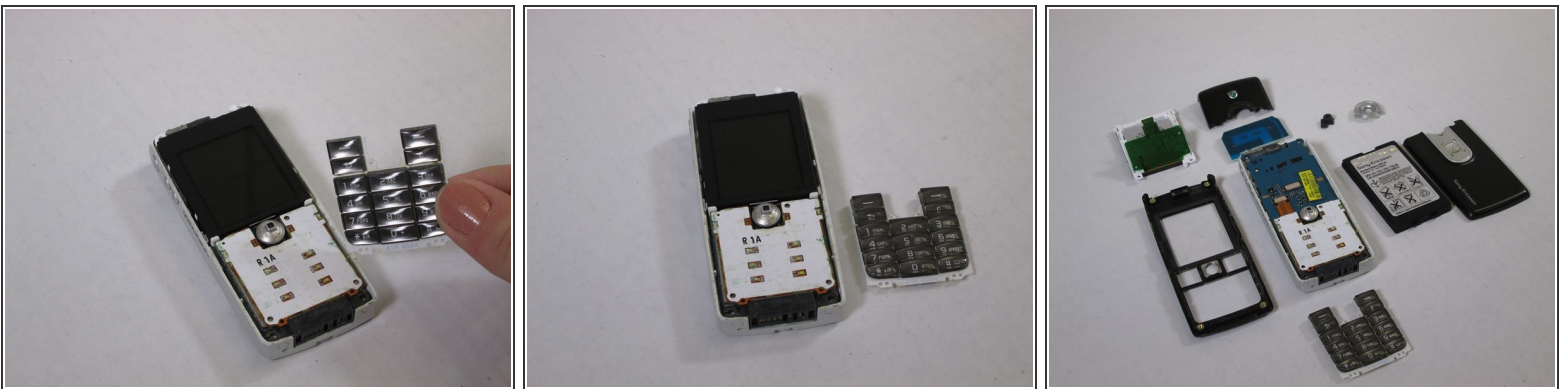

- Remove the keyboard by slowly pulling it away from the circuit board.
- i** There are no direct connections between the keyboard and phone.
- i** These are all of the parts covered in this disassembly that make up the Sony Ericsson QuickShare T630.




## Step 11 — How to clean Sony Ericsson QuickShare T630 joystick

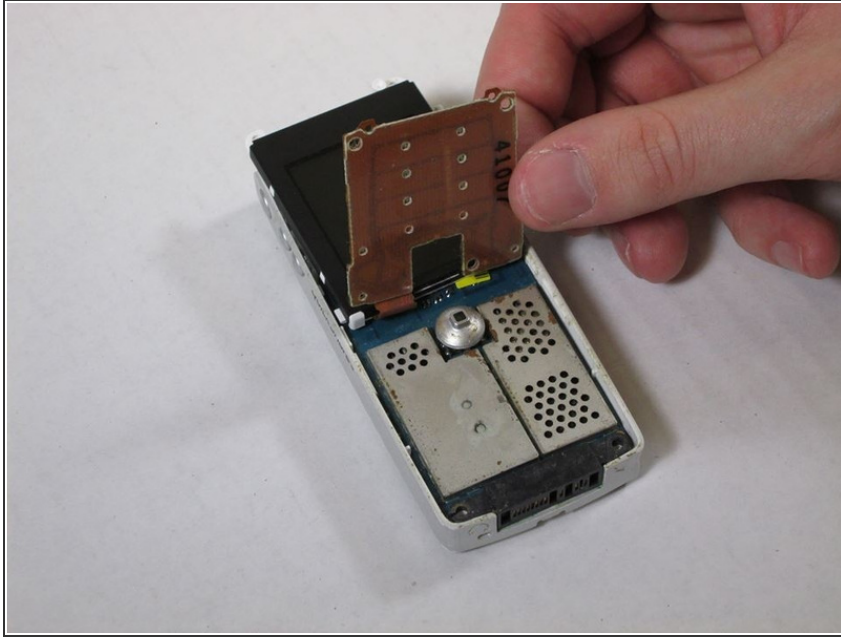

- Gently lift the white circuit board to reveal the base.

## Step 12

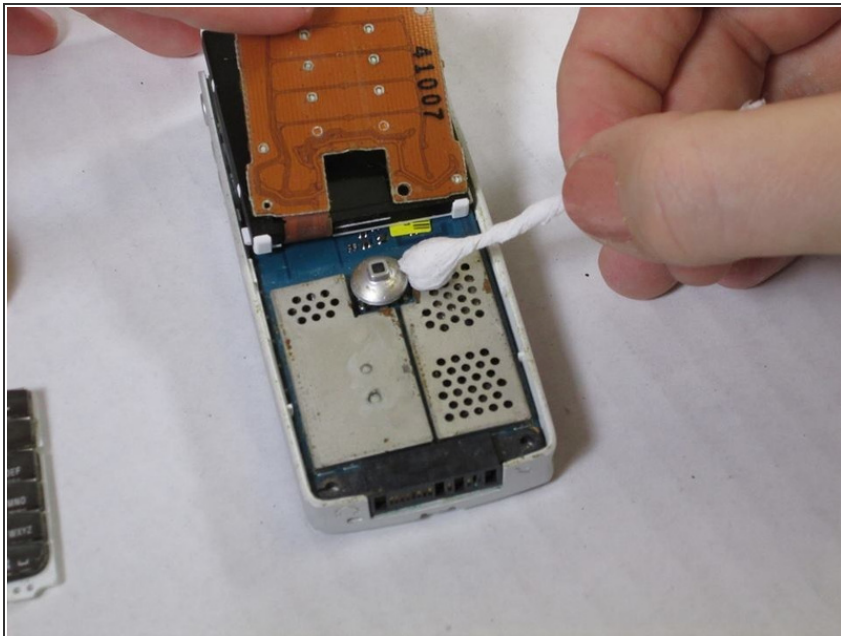

- Soak cotton swab in rubbing alcohol
- Gently work the cotton swab around the joystick, removing any waste buildup that may hinder its use.

To reassemble your device, follow these instructions in reverse order.